 



YJ-300T QUICK MANUAL

- Use 1.5V AA-size(ALKALINE) batteries only.
- The printer should be turned off when not in use.
- Do not block the IrDA window for IrDA communication.

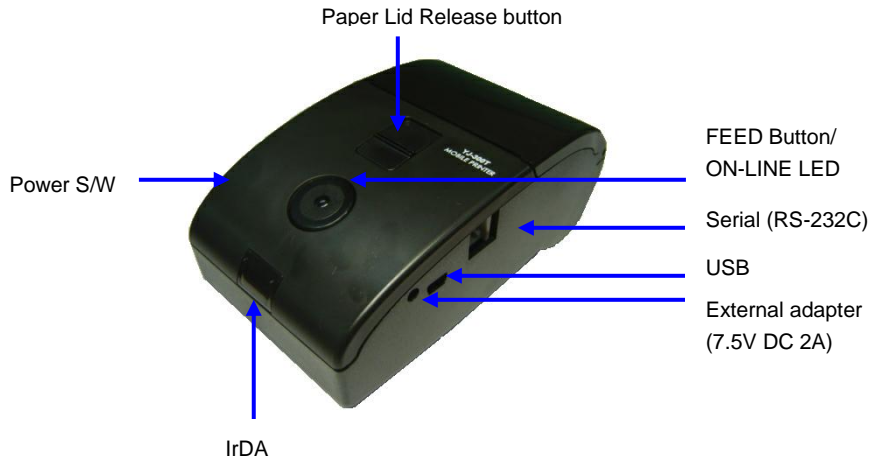

PRINTER SETTINGS

 - You should use DIP switch to set the printer.
- The DIP switch is on the right side of the battery compartment.

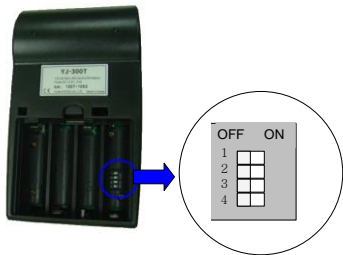

1	2	Buad rate set
OFF	OFF	9600bps
ON	OFF	19200bps
OFF	ON	115200bps
ON	ON	2400bps
3	4	Columns set
OFF	OFF	32Columns
ON	OFF	42Columns
OFF	ON	24Columns
ON	ON	36Columns


BATTERY EXCHANGE

1 Please turn off the printer power.

2 Remove the battery cover from the back.



3 Arrange the batteries as shown in the picture below.

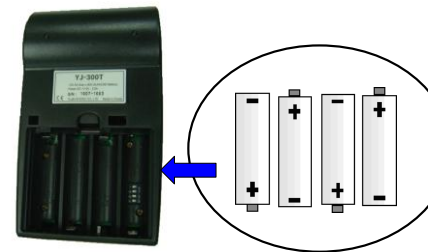

- Use 1.5V AA-size(ALKALINE) batteries only
- Please note the direction of the batteries.
- do not mix new and used batteries
- do not mix rechargeable and non-rechargeable batteries

4 Replace the battery cover. Turn on the power and make sure it is operating properly


PAPER EXCHANGE

1 Do not send data to printer while you exchange papers.

2 Push the paper lid release button.



3 Put paper into the tray in the direction shown in the picture.

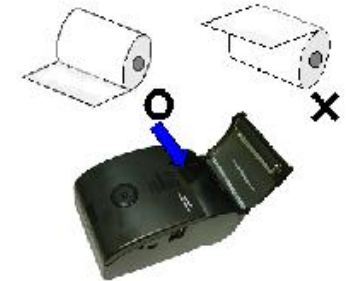

4 Press FEED button to check the paper comes out properly.

